





Replacement Parts List

PARTS & SERVICE DEPARTMENT
 Nashville, Tennessee
 615-889-8900 • Fax: 615-547-1000
www.Lochinvar.com


Power-Fin® Heating Boilers & Hot Water Supply Boilers PB/PF 502 thru 1302

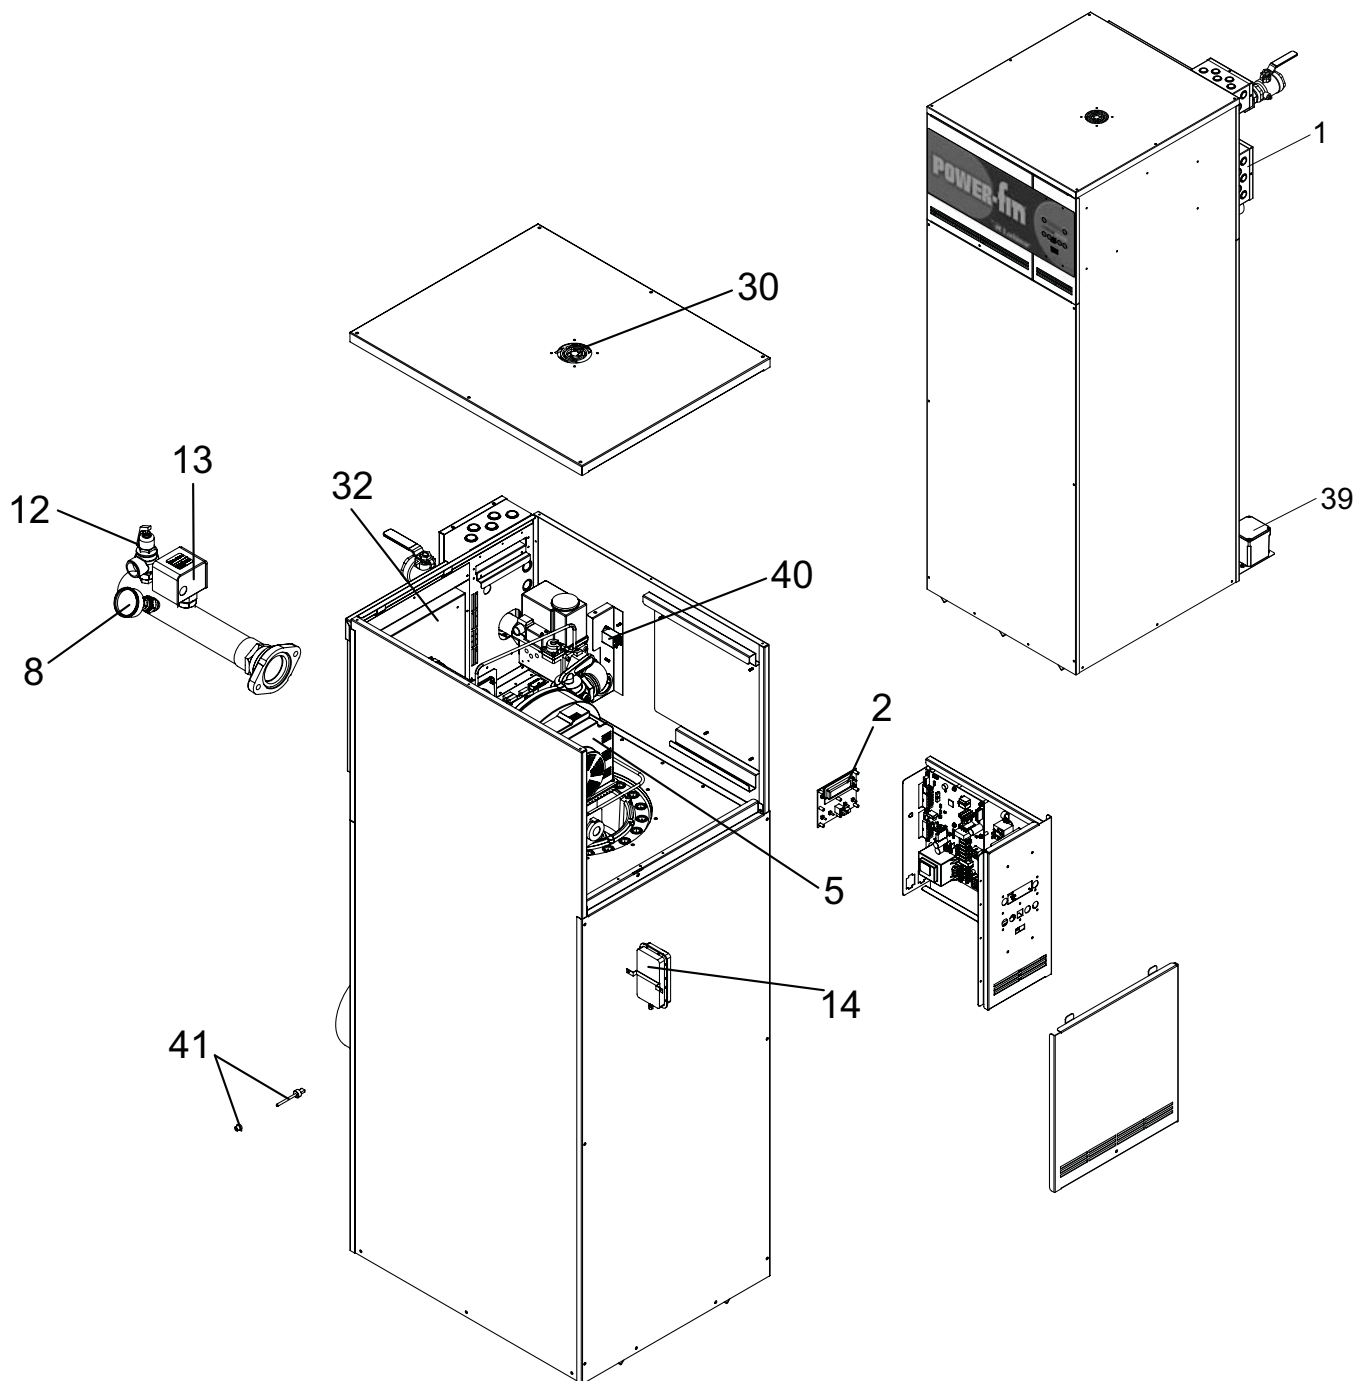


CONTROL PANEL ASSEMBLY

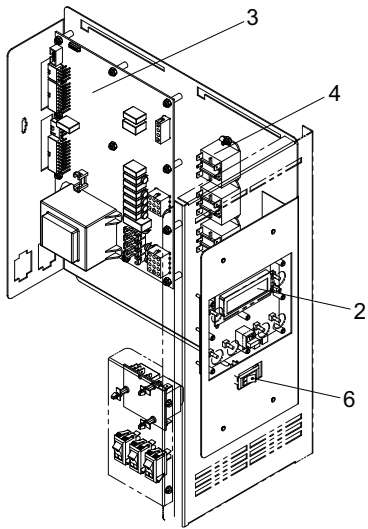

HEAT EXCHANGER ASSEMBLY

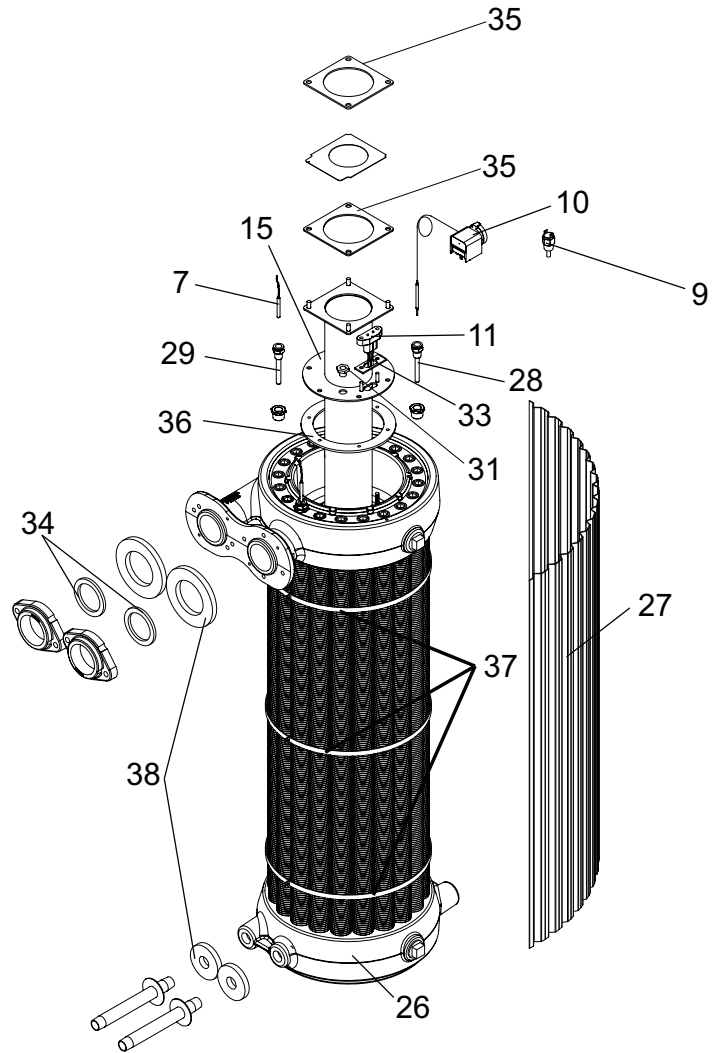

GAS TRAIN ASSEMBLIES

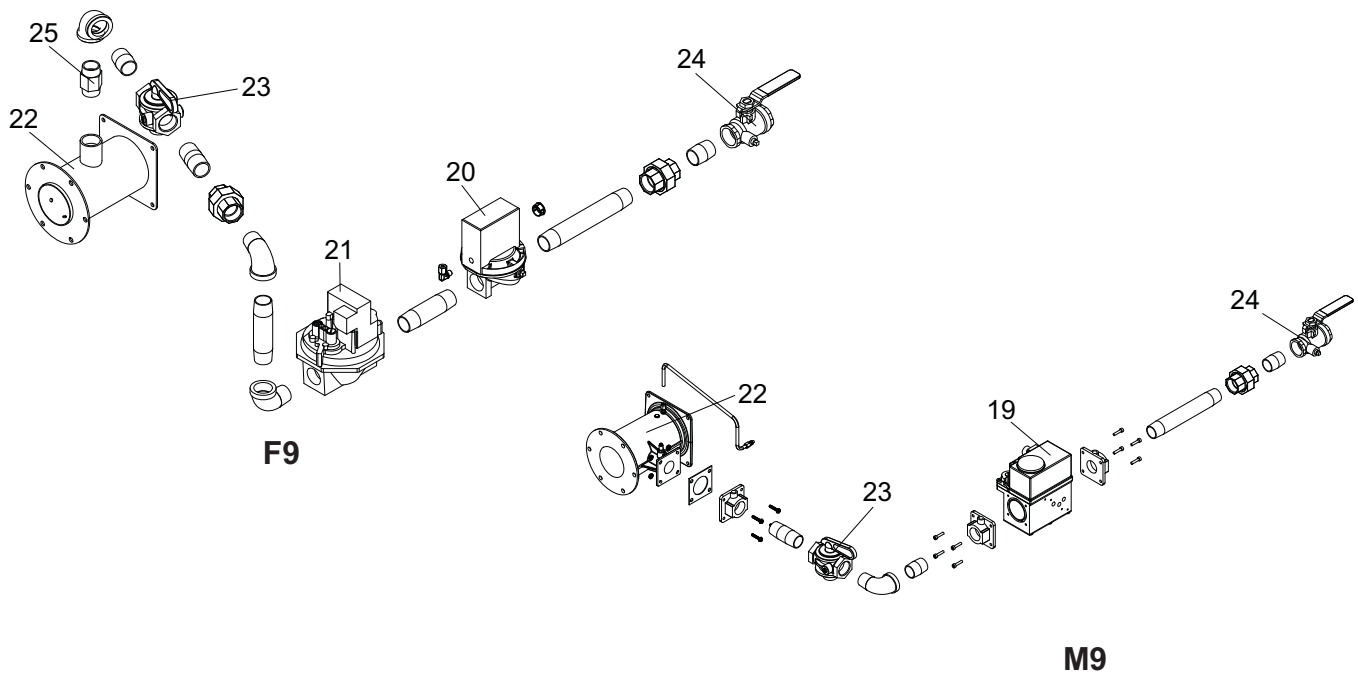

ITEM NO.	PART NO.	DESCRIPTION	MODEL NO.
CONTROLS & GAUGES			
1	RLY2114	CONNECTION BOARD	ALL
2	RLY2210	BOARD, CONTROL, USER INTERFACE	ALL
3	RLY2100	BOARD, CONTROL, MAIN	ALL
4	RLY2706	PUMP RELAY	ALL
5	FAN3727	FAN, COMBUSTION AIR	ALL
6	SWT2006	ON/OFF SWITCH	ALL
7	TST2032	THERMOSTAT SENSOR	F9
8	GTP2900	GAUGE, TEMP AND PRESSURE	PB
9	HLC2510	THERMOSTAT, HI LIMIT 200 DEGREE	PF
10	HLC2701	THERMOSTAT, HI LIMIT W/ AUTO RESET	ALL
11	PLT3400	IGNITOR, HOT SURFACE	ALL
12	RLV2001	RELIEF VALVE, PRESSURE ONLY	PB 502-1002
12	RLV2003	RELIEF VALVE, PRESSURE ONLY	PB 1302
12	RLV2007	RELIEF VALVE, TEMPERATURE & PRESSURE	PF
13	WTR2040	FLOW SWITCH	ALL
14	PRS2431	SWITCH, LOW AIR	502 - LP - F9
14	PRS2432	SWITCH, LOW AIR	502 - NAT - F9
14	PRS2433	SWITCH, LOW AIR	752 - LP - F9
14	PRS2434	SWITCH, LOW AIR	752 - NAT - F9
14	PRS2435	SWITCH, LOW AIR	1002 - LP - F9
14	PRS2436	SWITCH, LOW AIR	1002 - NAT - F9
14	PRS2437	SWITCH, LOW AIR	1302-F9
14	PRS30002	SWITCH, LOW AIR BEFORE D08	502 - LP - M9
14	PRS20008	SWITCH, LOW AIR AFTER D08	502 - LP - M9
14	PRS30001	SWITCH, LOW AIR BEFORE D08	502 NAT & 752-1302-M9 NAT/LP
14	PRS20006	SWITCH, LOW AIR AFTER D08	502 NAT & 752-1302-M9 NAT/LP
GAS TRAIN ASSEMBLIES			
15	BNR3713	BURNER	502
15	BNR3714	BURNER	752
15	BNR3715	BURNER	1002
15	BNR3716	BURNER	1302
19	VAL3417	VALVE, GAS	502-M9
19	VAL3418	VALVE, GAS	752-M9
19	VAL3419	VALVE, GAS	1002-M9
19	VAL3420	VALVE, GAS	1302-M9
20	VAL2131	VALVE, GAS DIAPHRAGM 1"	502-F9 NAT & LP
20	VAL2132	VALVE, GAS DIAPHRAGM 1 1/4"	752-1002-1302 - NAT - F9
20	VAL2019	VALVE, GAS DIAPHRAGM 1 1/4"	752-1002-1302 - LP - F9
21	VAL2133	VALVE, MAIN GAS 1"	502- NAT - F9
21	VAL2726	VALVE, MAIN GAS 1"	502 - LP - F9
21	VAL2134	VALVE, MAIN GAS 1 1/4"	752-1002-1302 - NAT - F9
21	VAL2520	VALVE, MAIN GAS 1 1/4"	752-1002-1302 - LP - F9
22	VAL2722	VALVE, VENTURI	502-M9
22	VAL2723	VALVE, VENTURI	752-1002-M9
22	VAL2724	VALVE, VENTURI	1302-M9
22	MAN2149	VALVE, VENTURI	ALL F9
23	GAC2029	GAS COCK	502
23	GAC2030	GAS COCK	752-1002-1302
24	VAL2207	VALVE, BALL	ALL 502
24	VAL2208	VALVE, BALL	752-1002-F9 & 752-1002-1302-M9
25	ORF2762	ORIFICE, BURNER	502 - NAT - F9
25	ORF2763	ORIFICE, BURNER	752 - NAT - F9
25	ORF2764	ORIFICE, BURNER	1002 - NAT - F9
25	ORF2765	ORIFICE, BURNER	1302 - NAT - F9
25	ORF2766	ORIFICE, BURNER	502 - LP - F9
25	ORF2767	ORIFICE, BURNER	752 - LP - F9
25	ORF2768	ORIFICE, BURNER	1002 - LP - F9
25	ORF2769	ORIFICE, BURNER	1302 - LP - F9

©-10/08-Printed in U.S.A.